3.

use it again.





Using the Belt Sander

Let the belt sander run up to full speed before lowering it carefully onto the surface. Be

Apply only moderate pressure to the machine. Any extra pressure will overload the

If you think the cable may be cut or damaged in any way, switch off and unplug at the

socket before inspecting it. If the cable attached to the belt sander is damaged, stop using

the machine. Contact the hire company. If an extension cable has been damaged, do not

Watch out for signs that vibration may be affecting your hands. If your fingers start to tingle

blood circulation. Find out more about vibration. Ask the hire company for a copy of the

To help prevent vibration affecting your hands, operate the machine for shorter periods.

Remember to empty the dust bag when it is half full or when you stop work. Wood dust is

If your equipment does not work properly do not attempt to repair it. Contact the hire

After switching off, do not put the machine down until the belt has stopped moving it.

12. Make sure that any ventilation slots in the belt sander do not get blocked with sawdust.

Switch off and unplug before making adjustments or changing the sanding belt. 15. Switch off and remove the plug from the socket before leaving the belt sander unattended.

or feel numb, take a short break from using the machine. Exercise your fingers to encourag

HAE leaflet no. 2150 - Hand-arm vibration or visit www.hse.gov.uk/vibration

Wear your protective equipment including ear defenders, dust mask and goggles

prepared for the reactive force when the sanding belt contacts the surface.

Always hold the belt sander firmly with two hands while working.

Keep the cable clear do not let the machine run over it.

Lift the machine off the work surface before switching off.

Take care not to accidentally pull the plug from the socket.

Keep your hands warm - wearing gloves may help do this.

highly flammable do not empty the dust bag onto a fire.

machine and may cause grooves in the work.

0407 Safety Guidance

Belt Sander

The rules and procedures in force where people are at work may require the person responsible for this equipment to carry out a specific risk assessment.

It is important to read all of this leaflet **BEFORE** you use the Belt Sander

- Electricity is dangerous and must always be used with great
- This belt sander is designed to sand wood, but not rough timber. It can also be used on metal, rust or painted surfaces You must use the appropriate sanding belt. It is not designed for any other purpose.
- The action of this belt sander can cause injury or damage if the machine is not used in a careful and controlled way.
- If you have not used a belt sander before, familiarise yourself with the machine on some straightforward work before you start on the main task
- Plan your work and think ahead to make sure you will always be working safely.
- You must have at least the following items of personal protective equipment: goggles: EN166 or BS2092; dust mask - a minimum of EN149 FFP3(s) protection; Safety boots to EN345 or BS1870/4972; industrial quality gloves; residual-current device (RCD) if using a 230 volt (mains) supply
- A personal first-aid kit should be available.
- This belt sander must not be used by minors, or by anyone under the influence of drugs or
- This belt sander is designed for operation by an able bodied adult. Anyone with either temporary or permanent disability must seek expert advice before using it.
- Although belt sanders are designed for one person operation you should always be careful you do not lift beyond your own capabilitie

have the force of law and only the courts can authoritatively interpret the law.





44 (0) 121 333 4109

44 (0) 121 380 4600

Do not empty the sawdust bag onto a fire

when you stop work. Remember the

Empty the dust bag when it is half full or

Adjust the tension and tracking each

correct direction of rotation as marked

sanding belt recommended by the rife

Make sure you use the correct type of

socket before making adjustments or

3. The sanding beits must be titted in the

sawdust is highly flammable.

time you fit a new belt.

ou each belt.

company.

- it may explode.

















2450 Regents Court



You may want to read this leaflet again. Please keep it until you finish work.



www.hae.org.uk



©Copyright Hire Association Europe April 2011

Any unauthorised reproduction – manually or electronically – is STRICTLY prohibited

extension cable > belt sander. 230v: Wall socket > RCD > any necessary

necessary extension cable > belt sander. 110V: Wall socket > transformer > any

Summary:

connections are dry and sate. 5. Make sure that any extension cable

will overheat and could catch fire. vehicles might run over it. Unroll it fully or it mignt be trapped, and piaces where edges, doorways or windows where it 4. Lay it out carefully avoiding liquids, sharp

directly into the HCD. not longer than 50 metres (160 feet). Plug it only use a suitably rated heavy duty one, given any special instructions, you should hire company. If the hire company has not follow any special instructions given by the 3. If you need to use an extension cable,

n unw peliddns the RCD according to the instructions HCD is working each time you use it. Heset 5. Use the "TEST" button to check that the

rne cable or machine gets damaged. help to protect you against electric shock if Plug your machine into the HCD. This will plugged directly in to the 230volt socket. 1. Use a residual current device (ACD)

> (SQUARE PIN OR BLUE PLUG) 230 VOLT MACHINES

connections are dry and safe. 4. Make sure that any extension cable

catch life. Unroll it fully or it will overheat and could places where vehicles might run over it. windows where it might be trapped, and avoiding liquids, sharp edges, doorways or 3 Lay the extension cable out carefully

(160 feet). extension cable, not longer than 50 metres use a suitably rated neavy duty 110v suy special instructions, you should only company. If the hire company has not given sny special instructions given by the hire 2. If you need to use an extension able, follow

cables. socket. Do not use any 230v extension the transformer directly into the 230 volt 1. If you are using a portable transformer, plug

110 VOLT MACHINES (YELLOW PLUG)

industrial plug. Read the instructions below for normal square pin plug fitted, or a blue plug titted. 230v machines will have either a JUV MACRINES WILL NAVE A YELIOW INCUSTRIAL

voltage: it will be 110v or 230v. Your machine will only operate on one

ELECTRICAL SAFETY







The Crescent Birmingham Business Park noo sinegen uch

BAY 788 Iludilos

or protection. environments may require a higher level you use this machine. Particular jobs or minimum that should be worn whenever protective equipment (PPE) are the The following items of personal

SHOTARIAN

objects that may be damaged, or difficult amount of dust - cover any suraces or Sanding certain materials makes a large

be securely ciamped or neid in a vice. Any work that is not part of a fixture should

where it might get wet. Do not use this sander in the rain or

rubble, rubbish etc.

Clear the area of trip hazards such as excinsion zone.

assisting with the work, enter the anyone, other than those directly Work should stop immediately should

naing tris equipment. keep children and animals away when physical barriers, barrier tape and signs. where the belt sander is being used with up an exclusion zone around the area Protect other people from the dust. Set

and that no-one is near to you or could Make sure that the area is clear and safe

fumes from petrol, or gas cylinders. is a danger of explosion. It will ignite Do not use this belt sander where there

WORK AREA



SANDING BELTS AND DUST BAG

changing the sanding belt.

protective equipment. also need to wear identical personal 2. Anybody who is working near to you will

You must wear industrial quality gloves.

You must wear safety boots (EN345 or

brotection) when you are in contact with mask (with a minimum of EN149:2001FFP3 You will need to wear an appropriate dust





